SAMSUNG

Operating Instructions

VACUUM CLEANER

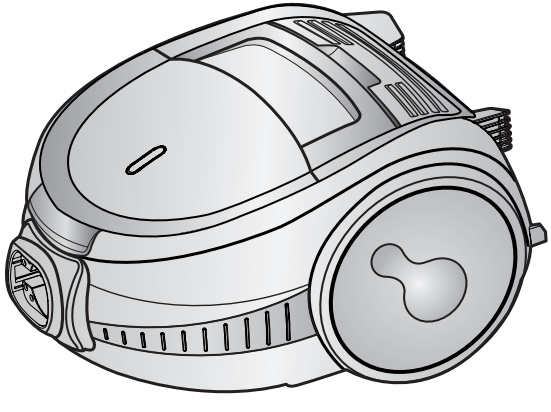

❊ Before operating this unit, please read the instructions carefully.
❊ For indoor use only.

Register your product at www.samsung.com/global/register

DJ68-00308A REV(0.2)

IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.

2. WARNING: Do not use the vacuum cleaner when rug or floor is wet.
   Do not use to suck up water.

3. This appliance is not intended for use by young persons or infirm persons without supervision unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
   Young children should be supervised to ensure that they do not play with the appliance.

4. Do not use the vacuum cleaner without a dust bag. Replace the dust bag before it is full in order to maintain the best efficiency.

5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources.
   Heat can deform and discolour the plastic parts of the unit.

6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put a weight on the hose. Do not block the suction or the exhaustion part.

7. Switch the vacuum cleaner off at the machine before unplugging from the electrical outlet. Do not pull on the cord to disconnect the plug from the electrical outlet. Ensure that it is disconnected before attending to the filter.

8. The plug must be removed from the socket out-let before cleaning or maintaining the appliance.

9. The use of an extension cord is not recommended.

10. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.

11. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

12. The vacuum cleaner is provided with a self-resetting thermal cut-out which automatically shuts off on over-heating. Overheating can be caused by blockage in the filter, nozzle, tube or hose. After removing the cause and allowing the motor to cool, the vacuum cleaner will automatically restart.

1 ASSEMBLING THE CLEANER

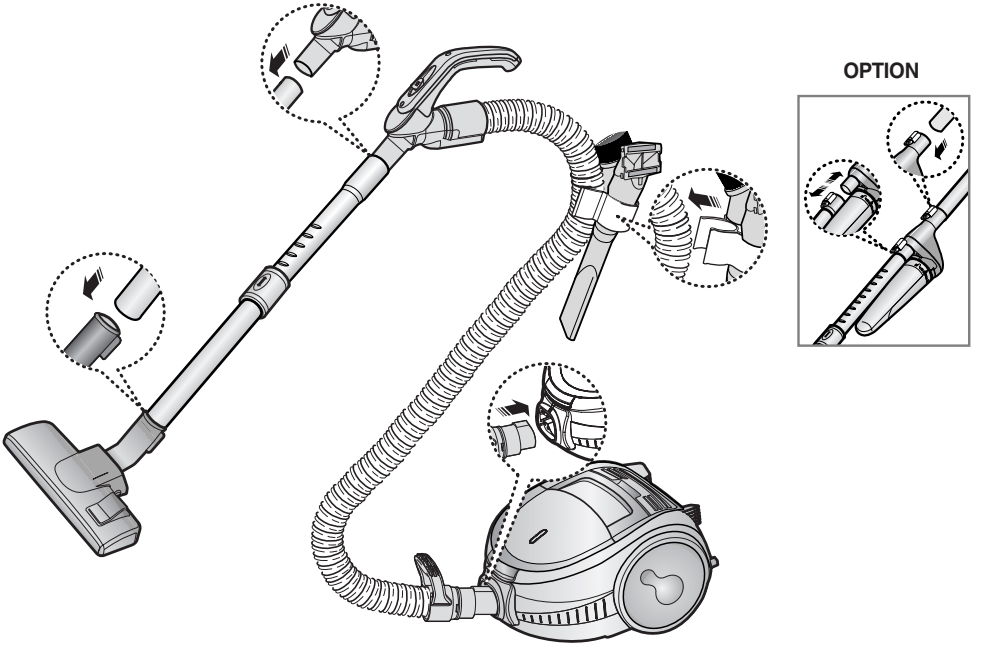

► Features may vary according to model.

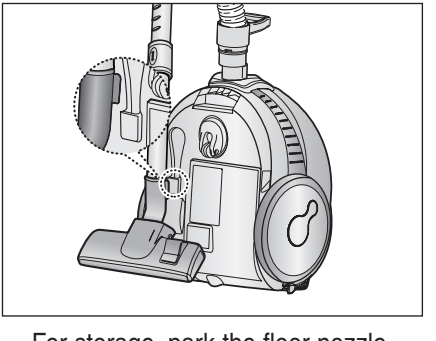

For storage, park the floor nozzle.

2 OPERATING YOUR CLEANER

2-1 POWER CORD

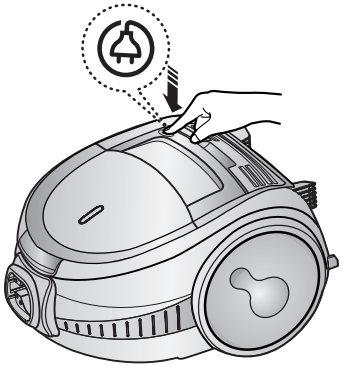

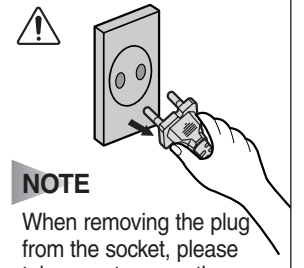

NOTE

When removing the plug from the socket, please take care to grasp the plug, not the cord in order to avoid undue stress.

2-2 HANDLE CONTROL TYPE ONLY

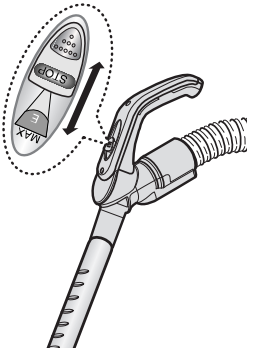

- **SLIDE TO THE STOP POSITION**
  Vacuum-cleaner switches off (stand by mode)
- **SLIDE FORWARD TO MAX**
  Suction capacity increases smoothly up to maximum.

2-3 USING CYCLONE FILTER (OPTIONAL)

2-4 USING FLOOR TOOLS

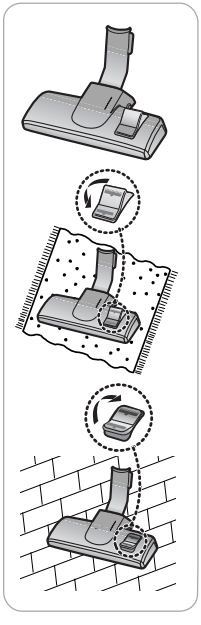

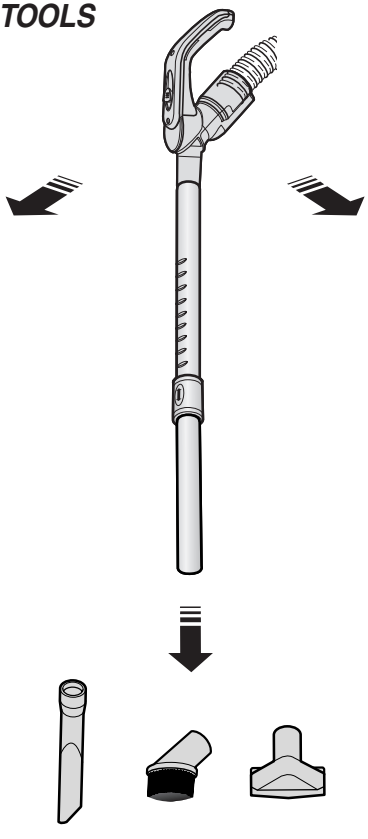

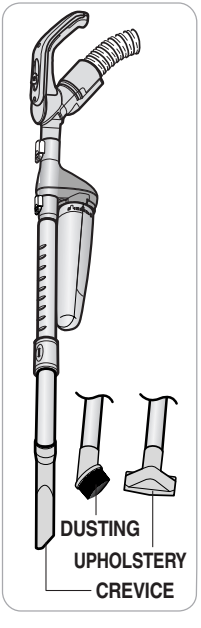

OPTION

PARQUET SPECIALIST

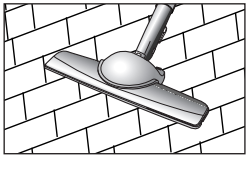

HARD FLOOR

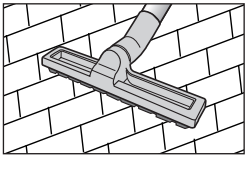

SMART

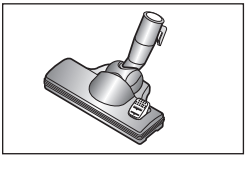

OPTION

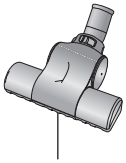

Blanket brush

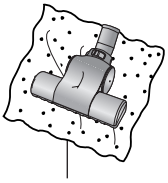

Bedclothes or Blanket

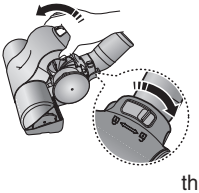

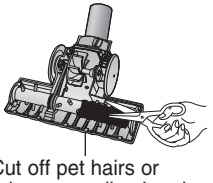

Cut off pet hairs or threads surrounding brush by using scissors.

3 DUST FULL INDICATOR

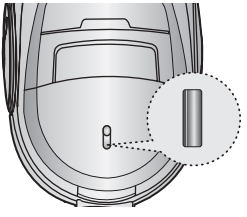

If the “Dust-Full” indicator changes to “RED” while you are cleaning, the dust bag, requires replacement.

NOTE : If the “Dust-Full” indicator continues to display “RED” even after changing the dust bag, turn the cleaner off and check whether the hose, tube or nozzle is clogged.

4 CHANGING THE DUST BAG

1

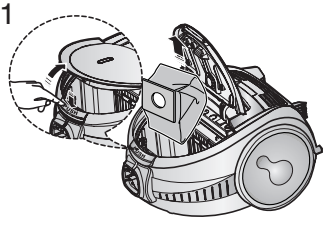

2

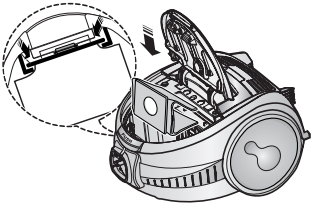

3

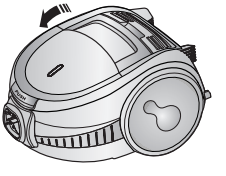

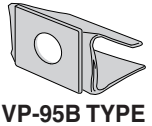

VP-95B TYPE
VP-95M TYPE

OPTIONAL

• FOR CLOTH FILTER BAG
After using, if the cloth bag is full of dust, clean the cloth filter bag and use it again.

5 CLEANING THE CYCLONE FILTER (Optional)

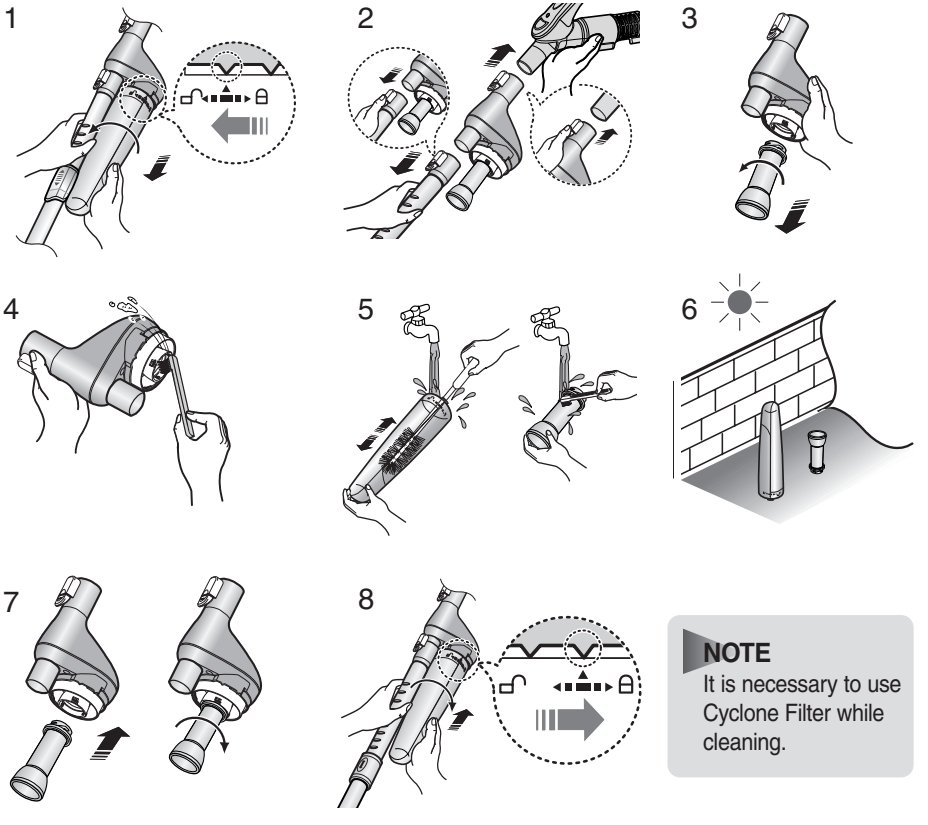

NOTE
It is necessary to use Cyclone Filter while cleaning.

- CLEANING THE INNER PART OF CYCLONE FILTER

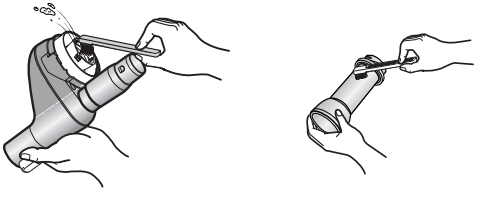

6 CLEANING THE INLET FILTER

1

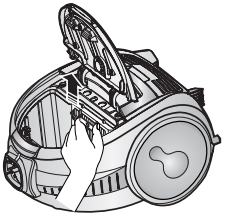

2

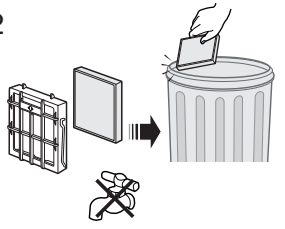

3

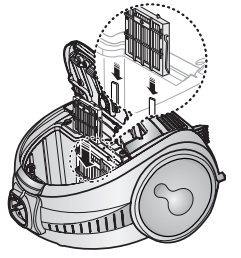

NOTE : Do not allow the filter to become clogged as this may cause power reduction or may damage the motor.

7 OUTLET FILTER

1

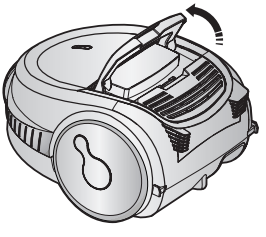

2

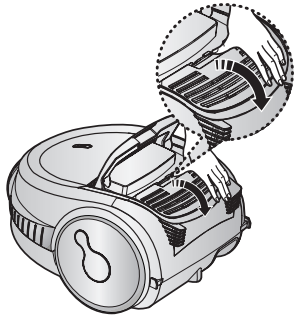

3

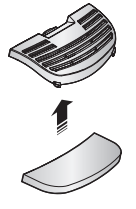

- IF YOU HAVE A PROBLEM

PROBLEM	CAUSE	REMEDY
Motor does not start.	No power supply. Thermal cut-out.	Check cable, plug and socket. Leave to cool.
Suction force is gradually decreasing.	Nozzle, suction hose or tube is blocked.	Remove the object and empty/ wash cassette filter as required.
Cord does not rewind fully.	Check that the cord is not twisted or wound unevenly.	Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner does not pick up dirt.	Crack or hole in hose.	Check hose and replace if required.

This Vacuum cleaner is approved the following.
EMC Directive : 89/336/EEC , 92/31/EEC and 93/68/EEC
Low Voltage Safety Directive : 73/23/EEC and 93/68/EEC

If you have any comments or questions regarding Samsung products, contact the SAMSUNG customer care center.

Country	Customer Care Center ☎	Web Site
U.K	0870 242 0303	www.samsung.com/uk
SOUTH AFRICA	0860 7267864 (SAMSUNG)	www.samsung.com/za